

Troubleshooting Guide - Eco Bot 50

Unable to turn on the Eco Bot 50?

- Check that the trip switch is on - this is located on the top of the wheel.
- Ensure the battery is properly charged.

Unable to proceed to Auto Cleaning?

- Ensure that the Emergency Stop is not pressed.
- Is Auto Mode activated?
- Make sure that the sensors aren't covered by dust or spots.
- Ensure that a task has been selected.
- Check if positioning status is in green.

Water leaking from squeegee?

- Ensure the water tank lid is sitting flat creating a seal.
- Check if there is an air leakage in the suction hose.
- Make sure the suction hose is not blocked.
- Check the suction power is at right level.
- Ensure the cap is on the end of the recovery hose.

Troubleshooting Guide - Eco Bot 50

Water stains left on the ground after scrubbing?

- Ensure that the squeegee bar is clean and no debris attached.
- Make sure the squeegee is properly installed.
- Check if the castors are properly adjusted.

Machine not releasing water?

- Ensure there is water in the clean water tank.
- Check that the water spray is activated.
- Test in both manual and auto mode to understand if issue is with autonomous operation.
- Make sure the water hoses are free from bends or kinks.

Why has initialisation failed?

- Check if the wrong map has been selected.
- Ensure the machine is close enough to the start point (within 2 metres).
- Check if the surroundings of the start point has changed substantively.