


## **AUTONOMOUS CLEANING THROUGH INNOVATION**

## **USER MANUAL ECO BOT 50**

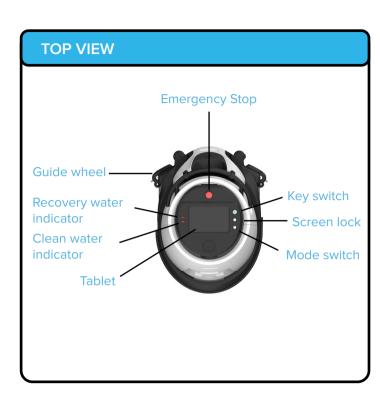











using the key and wait 30 seconds for the interface



configurations of water



turn green.



Select your account &



'manual mode'



the cleaning process or use the emergency stop



Once the machine has turned on it will report on he status of the consumable parts. Ensure these are of a

Fill the clean water tank

using a bucket or hose.





You can change the cleaning task by selecting the "change task" button. This will display all the pre-mapped tasks.



## DAILY MAINTENANCE



## PLEASE ENSURE THAT THE FOLLOWING IS COMPLETED AFTER EVERY USE.


- Stop the machine and ensure that the power is off.
- Clean the filters, squeegee blades & pad/brushes as required.
- Park the machine in a safe level place and put it on charge.



Empty the water out of the Take out the filter bag and



The use the water pipe to

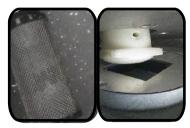

Check the cylindrical mesh and push down.



Check for any rubbish on the brush (make sure power is Then insert the plug into the Eco Bot and begin charging